 
 
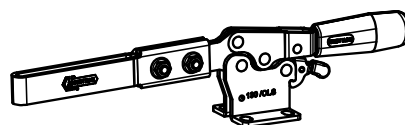 




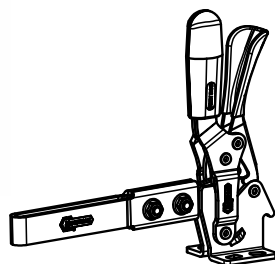


EXTENSION

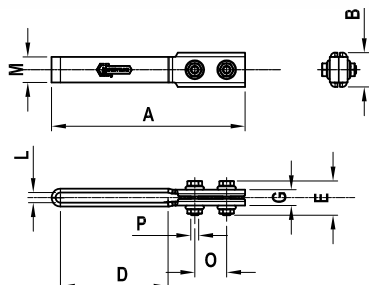




Code	Description	A	B	D	E	G	L	M	O	P	Q	gr.	Can be applied to the tools
AU340	AP6	121	21,5	67,5	21,5	10	6,3	16	20	M5		95	130/OLS/PLS/ELS/FLS
AU342	AP8	142	24,5	71,5	26,5	12	8,2	18	26	M6		165	230/OLS/PLS/ELS/FLS

   CROSS BAR

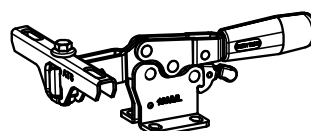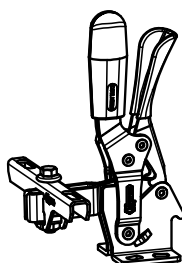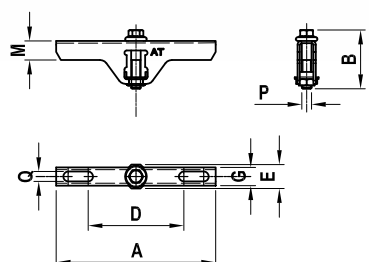

Code	Description	A	B	D	E	G	L	M	O	P	Q	gr.	Can be applied to the tools
AU320	AT6	100	37	60-85	15	11,5		12		M6	6,2	50	130 VER.-130 HORIZ.-125/AP3
AU322	AT8	120	43	70-100	18	14		15,5		M8	8,2	96	230 VER.- 230 HORIZ.- 200/AP3

   ARTICULATED CROSS BAR

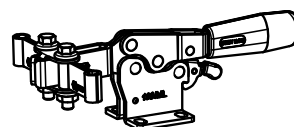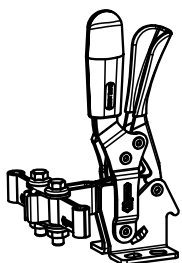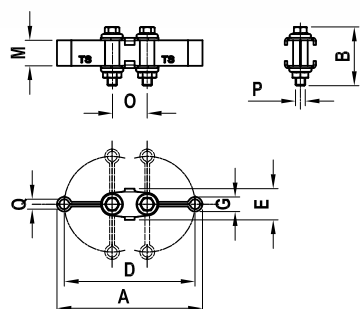

Code	Description	A	B	D	E	G	L	M	O	P	Q	gr.	Can be applied to the tools
AU330	TS6	91	37	82	19,5	9,2		16	22	M6	6,2	70	130 VER.- 130 HORIZ.- 125AP3
AU332	TS8	112	43	100	26	12		18	27	M8	8	120	230 VER.- 230 HORIZ.- 200AP3